Pressure Regulator

Brass

Model 7590D



Photograph for guidance only—appearance may vary

SPECIFICATIONS

Maximum flow rate	200	l/min
Minimum flow rate	38	l/min
Rated Pressure	150	bar
Permissible Pressure	170	bar
Minimum adjustable Pressure	15	bar
Max. Liquid -Temperature	90	ºC
Max. Liquid -Temperature (Continuous)	60	ºC
Inlet (1)	1”	BSP (female)
Discharge (1)	1”	BSP (female)
Bypass	1”	BSP (female)
Weight	2025	g

FEATURES

- Pressure Regulator Unloader Valve for use with Cat Pumps high-pressure positive displacement pumps.
- By-passes surplus flow back to source, or to pump inlet.
- Regulates operating pressure to maximise cleaning performance
- Protects pump and system from over-pressure damage.
- Pump speed is maintained when trigger is closed, ready for immediate return to full flow rate and working pressure when trigger is squeezed.


SELECTIONS

Select the correct Pressure Regulator Valve to suit the system flow rate and working pressure. Operation below the minimum rated flow of the Regulator Valve will cause the valve to cycle. Operation above the maximum rated flow of the Unloader Valve will cause premature valve wear and will prevent the desired working pressure from being maintained.


APPLICATIONS

- Pressure washing
- Central cleaning systems

CUTAWAY

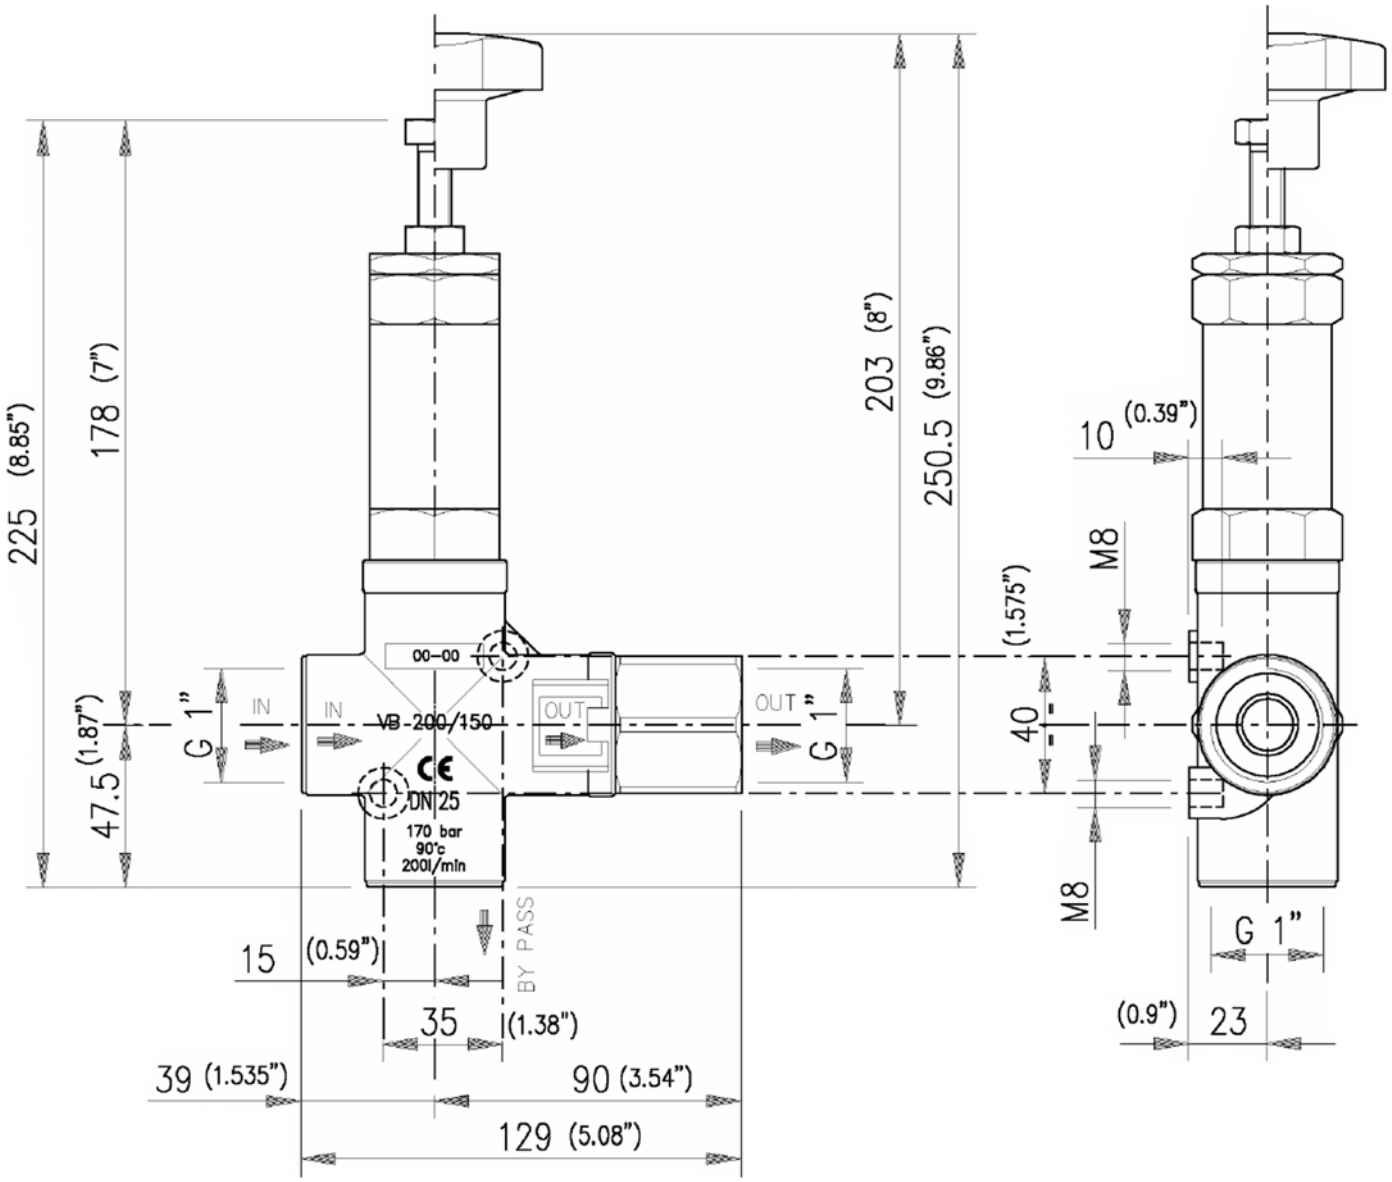
225 (8.85")
178 (7")
47.5 (1.87")
G 1"
IN
IN
VB-200/150
00-00
OUT
OUT
G 1"
CE
DN 25
170 bar
90°c
200l/min
BY PASS
203 (8")
250.5 (9.86")
(1.575")
40
10 (0.39")
M8
M8
G 1"
(0.9")
23
15 (0.59")
35 (1.38")
39 (1.535")
90 (3.54")
129 (5.08")

EXPLODED VIEW

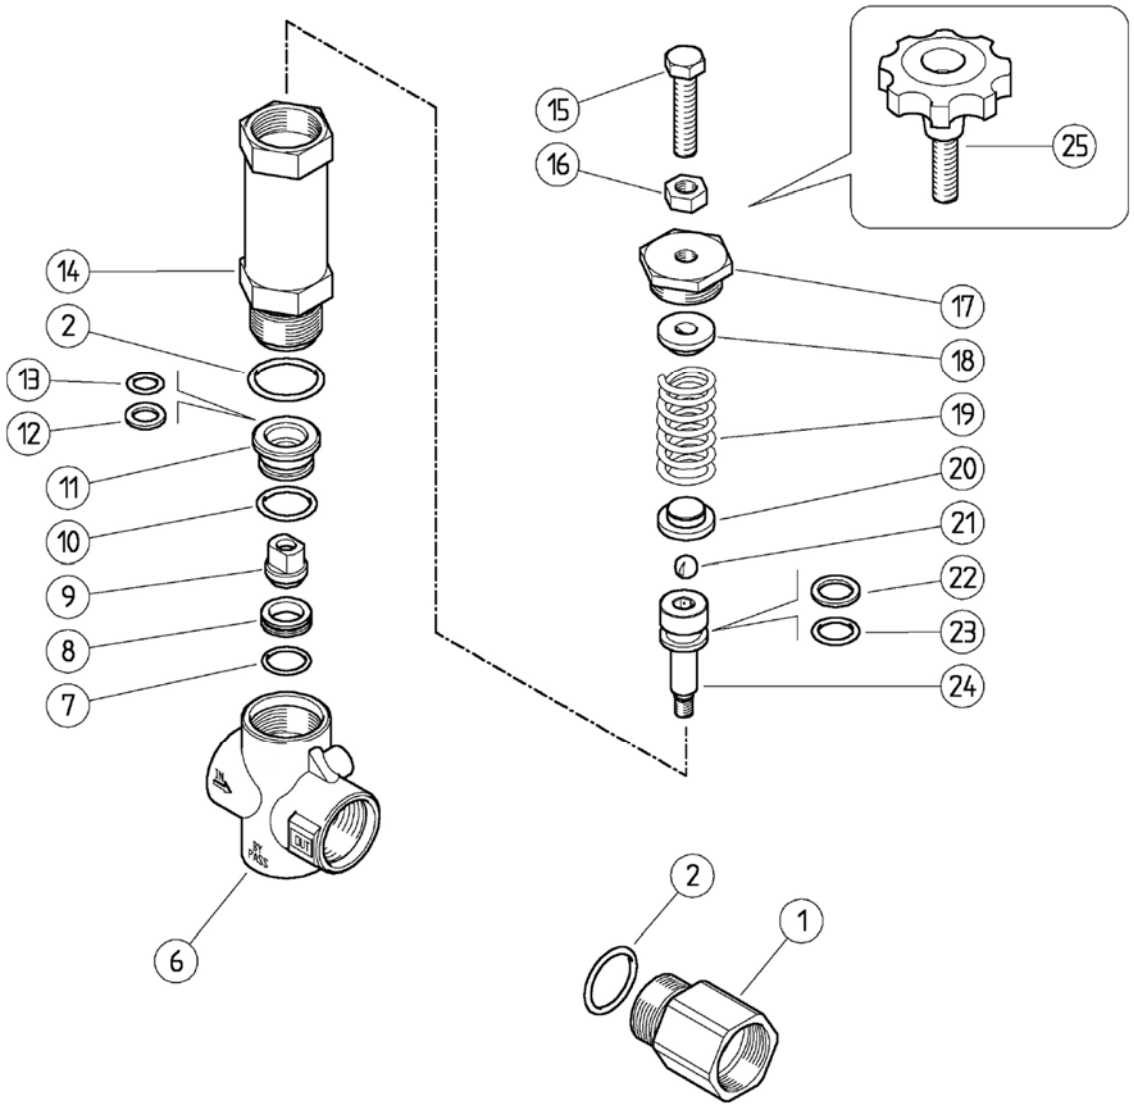

PARTS LIST

POS.	DESCRIPTION	K1	QTY
1	Shutter coupl., brass		1
2	O-Ring, 2,62x28,25 mm	X	2
6	Housing, 7590D, brass		1
7	O-Ring, 1,78x20,35 mm, Ni 85	X	1
8	Seat, 15,8x23x6 mm, ss	X	1
9	Shutter pin, M8, ss	X	1
10	O-Ring, 2,62x20,29 mm, Ni 90	X	1
11	Reduction bushing, brass		1
12	Back-up-Ring, 12x18,2x2 mm	X	1
13	O-Ring, 3,53x10,69 mm	X	1
14	Piston holder, brass		1
15	Valve regulating screw, M10x44 z.pl.		1
16	Hex. nut, M10		1
17	Upper plug, M10, brass		1

POS.	DESCRIPTION	K1	QTY
18	Spring, guide spacer, brass		1
19	Spring, 6x30x62 mm		1
20	Spring, guide spacer, brass		1
21	Ball 13/32“ ss		1
22	Back-up Ring, 15,8x22x2 mm	X	1
23	O-Ring, 3,53x15,47 mm	X	1
24	Piston, M8, ss		1
25	*Handwheel, 70 mm, M10x44*		*1*

K1	Spares-Kit, 7590		1

INSTALLATION GUIDELINES FOR **PRESSURE REGULATOR VALVES**

CAT PUMPS high-pressure pumps are designed and manufactured to exceptionally high quality standards and have an unequalled reputation for reliability and long life. The most common cause of pump failure is not the pump itself, it is poor installation. A good pump will not perform well if it is badly installed. If in doubt, always ask for advice. This document does not over-rule specific instructions provided elsewhere.

⚠ **It is the user's responsibility to carry out the necessary risk assessment and ensure that a suitable secondary protective device is fitted, such as a Pressure Relief Valve, to assure pump protection e.g. should the Unloader Valve malfunction.** Failure to install such relief devices could result in personal injury or damage to the pump or to system components. CAT PUMPS does not assume any liability or responsibility for the operation of a customer's high pressure system.

⚠ **CAUTION – Take care to work safely in accordance with good practice. Ensure all installations meet all relevant safety rules, laws, directives, standards, regulations and codes of practice. All work must be carried out by competent people who are appropriately trained and qualified.**

Installation

This Regulator Valve may be mounted in any orientation.

Keep the pipework as simple as possible and the adjusting nut or cap easily accessible. Plumbing to and from the Regulator Valve should be equal to or larger than the size of the valve ports.

The bypass is going back to pump inlet.

Pressure Adjustment

Before starting the pump, fully loosen the Regulator Valve adjustment nut or cap anti-clockwise.

Open all guns to permit full flow and start the pump to purge the system of air then close all guns whilst pump is running.

Turn the Regulator Valve adjustment nut or cap clockwise only until the required working pressure is shown on the pressure gauge. Do not exceed the maximum working pressure of the pump as this may damage the pump, drive motor or engine

Tighten the locking nut (if provided) to secure the setting.

If the intended working pressure cannot be reached, and further adjustment of the nut or cap does not increase the pressure shown on the gauge, do not turn any further. Instead, rotate the nut or cap anticlockwise until the pressure falls by approximately 10%. This is important, as the pump must not be run with the Regulator Valve set at the maximum achievable pressure. There must always be a small amount of flow through the bypass port. A bypass of at least 5% of the total pump flow is recommended even when all guns are open.

To check the amount of by-pass, you may wish to safely disconnect the bypass hose temporarily and observe or measure the bypass flow. A bypass of at least 5% of the total pump flow is recommended even when all guns are open. If this cannot be achieved, the Regulator Valve has been incorrectly specified or the downstream restriction is too low. The options are:

- Change Regulator Valve for correctly sized valve
- Fit smaller nozzle(s)
- Use fewer guns at any one time
- Install a larger CAT PUMPS high pressure pump or additional pumps

Trouble Shooting

If the operating pressure falls over a period of time, do not re-adjust the Regulator Valve to compensate. Check the following:

- Too many guns in use at one time
- Incorrect nozzle size fitted
- Nozzle(s) worn
- Engine or motor speed too low
- Slipping drive belts
- Pump seals or valves worn

technical Variation reserved, 15.06.2023 (JF)

Cat Pumps Deutschland GmbH
Buchwiese 2, D-65510 Idstein, Germany
Phone +49 6126/9303-0
Fax +49 6126/9303-33
E-mail: catpumps@t-online.de www.catpumps.de

Cat Pumps (U.K.) Limited
1 Fleet Business Park, Sandy Lane, Church Crookham
FLEET, Hampshire, GU52 8BF, England
Phone 01252 622031 - Fax 01252 626655
E-mail: sales@catpumps.co.uk www.catpumps.co.uk

"The World's Most Dependable Pumps"

World Headquarters Cat Pumps
1681-94th Lane. N.E. Minneapolis, MN 55449 - 4324
Phone (763) 780-5440 - FAX (763) 780-2958
E-mail sales@catpumps.com www.catpumps.com
International Inquiries
FAX (763) 785-4329 E-mail: intlsales@catpumps.com

N.V. Cat Pumps International S.A.
Heiveldekens 6A, 2550 Kontich, Belgium
Phone +32 3-450.71.50 - Fax +32 3-450.71.51
E-mail: cpi@catpumps.be www.catpumps.be